


TO ADJUST CUE SENSOR SENSITIVITY - P&F SENSORS:

1. THREAD FILM THROUGH CUR READER / FAIL-SAFE WITH A CUE PLACED IN THE MIDDLE OF THE FILM. POSITION CUE SO IT IS BEING "READ" BY THE SENSOR (ORANGE LIGHT WILL LIGHT, AND CUE ON FILM WILL BE ILLUMINATED BY RED LIGHT FROM SENSOR).
2. ADJUST SENSITIVITY SCREW COUNTERCLOCKWISE UNTIL ORANGE LIGHT CHANGES FROM STEADY TO PULSES . WHEN THIS HAPPENS, STOP. ROTATE THE SENSITIVITY ADJUSTMENT CLOCKWISE, UNTIL LIGHT IS STEADY. IF SENSOR IS NOT SENSITIVE ENOUGH, OR DOES NOT LIGHT, INCREASE SENSITIVITY BY ROTATING SCREW CLOCKWISE UNTIL LIGHT FLASHES, AND THEN UNTIL STEADY.
3. TEST WITH A PIECE OF FILM WITH CUES PROPERLY PLACED. (SEE DWG.CUE PLACE FOR CUE PLACEMENT AND TYPE, AND FILM THREADING DIAGRAMS).

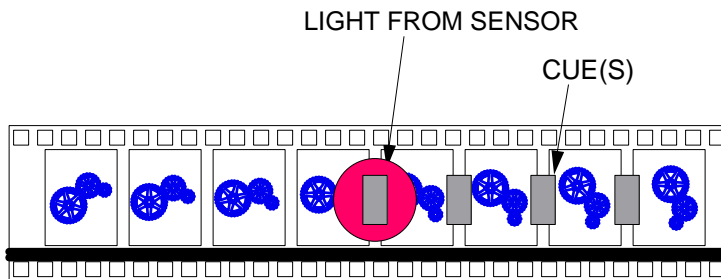

*Big Sky Industries*

908-454-6344

Tolerances	Project CUE SENSOR		
XX=+/- .015 XXX=+/- .005	Title	P&F SENSOR ADJUSTMENTS	
Date	Dwg.#	P&F SENSOR ADJUST.MCD	
4/2/09	Scale	N.T.S.	Drawn By M.M. Approved