


# Replacement Instructions for Replacing Pay-Out Head Speed Control Tape on Target Puck

**(Early version Big Sky Platter - pre 2005. This version of the platter will have only RED, GREEN and YELLOW LED indicators on the speed control modules, NO BLUE LED's)**

- 1) Remove old target clear cover and gradient tape.
- 2) Place PO head upside down on clean, flat surface, so target puck is up.
- 3) Apply new target tape as shown below, starting with the WHITE end, and applying counter-clockwise as shown below. Take care to keep the tape straight and parallel to puck edges. If tape is applied backwards, platter will operate erratically.
- 4) Apply new clear cover tape over target, trimming any excess, and having a minimum amount of overlap. The correct tape for the early version platters has a dull, matte finished surface, not a glossy surface.
- 5) Re-set PO arm position as shown on drawing:

Pay-Out head Assembly, Viewed from Top

Target Puck, showing alignment of Gradient Label overlap in respect to swinging arm location.


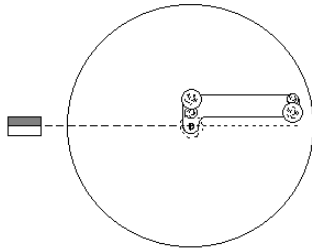


Black / white seam must be opposite of arm, 180 degrees as shown.

- 6) Test PO head on platter,

Gradient Tape for Pay-Out Head Speed Control

(Correct tape for the early version will have the letter "A" printed on it)

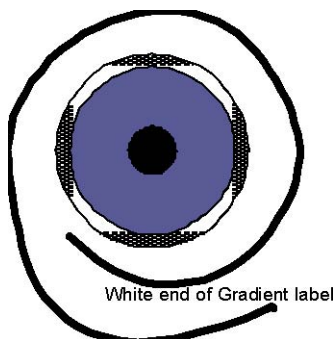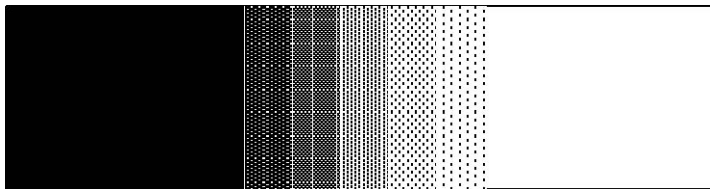

White end of Gradient label

Black end of Gradient label

Platter Pay-Out head Target Puck, viewed from bottom of Payout head assembly.