



# AUXILIARY RELAY, FIRE & CHANGOVER FUNCTION SETUP


## JP1 - Aux. Relay Turn Off Mode Select

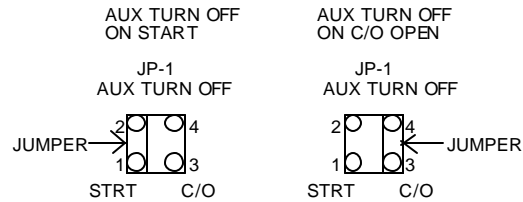

## JP11 - Aux. Relay Turn On Delay Select

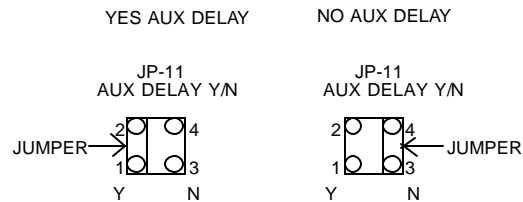


## R7 - Aux. Relay On Delay Adjust

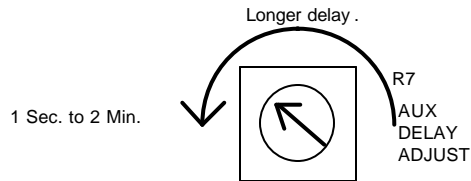


IF DELAY IS SELECTED, USE THIS POT TO ADJUST FOR DESIRED DELAY.

## JP2 - Fire Alarm Function Select

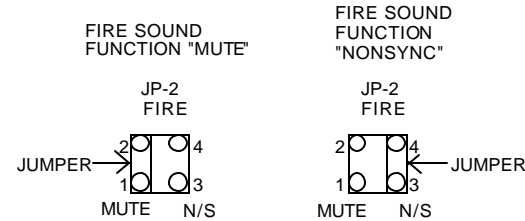

USE THIS HEADER TO SELECT WHAT SOUND FUNCTION WILL OCCUR IN THE EVENT OF A FIRE ALARM INPUT. IF THE FIRE SYSTEM HAS IT'S OWN PUBLIC ADDRESS SPEAKERS, SELECT THE "MUTE" FUNCTION. IF THE FIRE SYSTEM USES THE THEATRE SPEAKERS FOR PUBLIC ADDRESS, SELECT THE "NONSYNC" FUNCTION. THE DIMMER ALWAYS GOES TO PANIC ON FIRE INPUT.

## JP12 - C/O Function Select

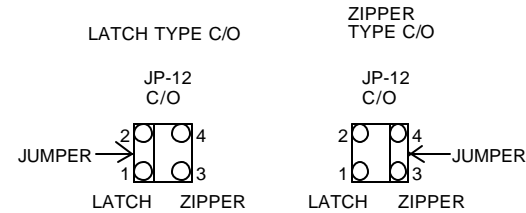

USE THIS HEADER TO SELECT WHAT TYPE OF C/O CONTROL IS NECESSARY FOR THE PROJECTOR BEING USED.

IF THE LATCH TYPE C/O IS USED, THE CLOSE RELAY IS NOT USED AND THE OPEN RELAY TURNS ON AND STAYS ON TO HOLD UP THE DOWSER.

IF A ZIPPER C/O IS USED, THE OPEN AND CLOSE RELAYS ARE BOTH NORMALLY OPEN AND PULSE CLOSED TO ACTIVATE THE C/O.

BIG SKY INDUSTRIES INC.		
259 CENTER ST. PHILLIPSBURG N.J. 08865		
Title AUX RELAY / FIRE / C/O FUNCTION SETUP		
Size A	Document Number ADIPSW_A2000-A. SCH	Rev -
Date: Friday, November 16, 2001	Sheet 1	of 1