


PEPPERL - FUCHS CUE SENSOR ADJUSTMENTS

(NOTE: SENSORS ARE PRE-SET AT FACTORY. DO NOT RE-SET.
ADJUSTMENTS SHOWN FOR REFERENCE ONLY)

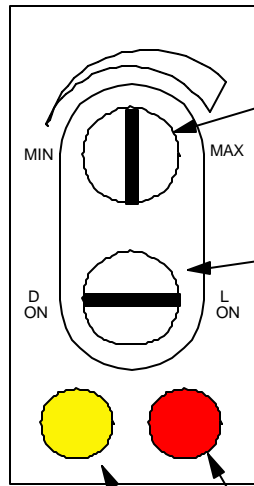

SENSITIVITY ADJUSTMENT: SET ABOUT HALFWAY.
LIGHTS YELLOW LED WHEN REFLECTIVE TAPE IS UNDER
SENSOR. ADJUST SO LED JUST LIGHTS SOLIDLY.

LIGHT / DARK ON SETTING: SET ON "LIGHT ON"
(YELLOW LED LIGHTS WHEN ACTIVATED)

ALARM LED: LIGHTS RED WHEN OUTPUT UNSTABLE

OUTPUT LED: LIGHTS YELLOW WHENACTIVATED

SENSORS USED FROM 02/11/2002 ONWARD

Big Sky Industries

908-454-6344

Tolerances	Project AUTOMATION		
XX=+/- .015 XXX=+/- .005	Title	P-F SENSOR ADJUSTMENTS	
Date	Dwg.#	P-F SENSOR ADJUST.MCD	
2-13-02	Scale	N.T.S.	Drawn By D.R. Approved