


The ideal routing of the data cable would be out the front of the console, up through some greenfield through the ceiling over to the next machine.
 This would keep the cable farthest from the igniter and power supply.

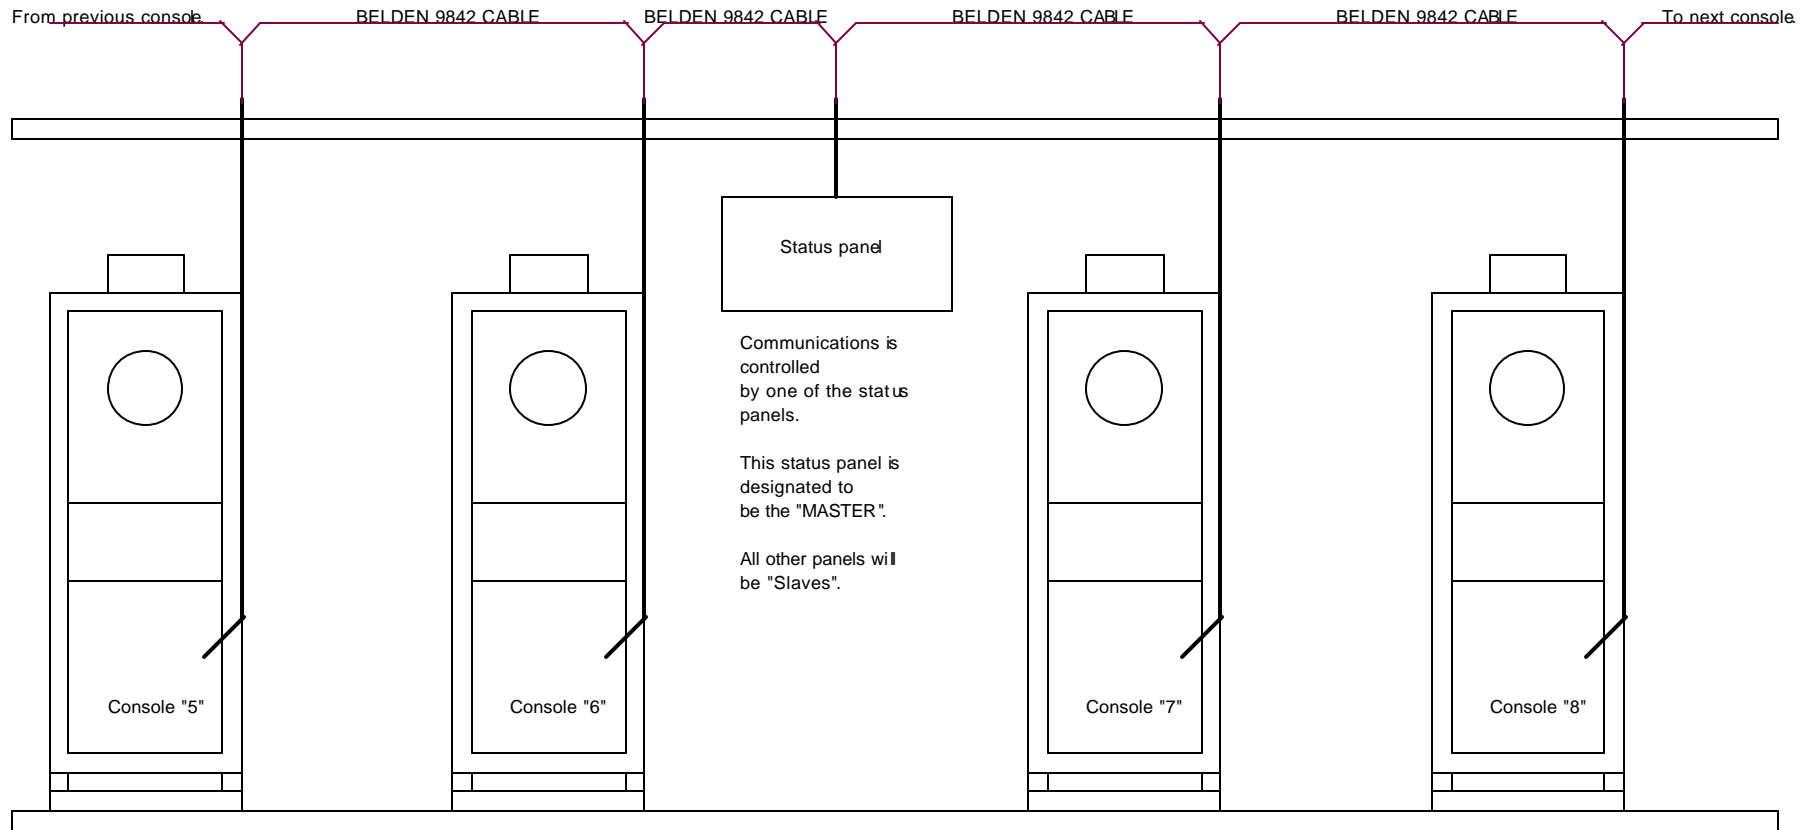

Wires are daisy chained from console to console and / or status panel.

Wires must be connected directly on the device being terminated.
 No junction boxes in the ceiling with tails down to the device.

See "Status panel wiring.sch" and "Console status wiring.sch" for local wiring details.

Automations are field addressable. Consoles may be placed and then addresses selected.

The two units at the extreme ends of the network must have the terminator installed.

July 2 2003 Change wire type from 1589A

BIG SKY INDUSTRIES INC.		
1475 PARK AVE ALPHA N.J. 08865		
Title RS-485 status system		
Size A	Document Number System wiring illustration.sch	Rev -
Date:	Thursday, June 16, 2005	Sheet 1 of 1