

Troubleshooting Guide: If the automation should not operate properly, first check the following guide to determine the cause. If, after checking the guide, operation is still not proper, contact your dealer or an authorized theatre equipment service person.

Problem

Solution

Automation does not turn on	When in a console, check that Automation breaker is turned on
	Check external breakers for off breaker
	Check that Automation power switch on front panel is turned on
	Check for loose or missing wires
	Check for open or missing fuse

Automation won't start	Check fail-safe of film tension sensor for 'on' position; reset if needed
	Check operating buttons for stuck or broken operation
	Check for correct operating mode (normal, interlock)

Automation doesn't read cues	Check film for presence and/or placement of cues on film
	Check and adjust sensitivity adjustment of cue detector
	Check power feed, wiring and connections of cue detector from automation

Automation doesn't control peripheral equipment	Check for disconnected, loose, missing or damaged cables
	Check for mis-wired control wiring
	Check for loose or missing relays in automation
	Check that peripheral equipment is turned 'on', and in 'auto' mode
	Check that diode ship for selected relay is not reversed or missing in matrix on selected cue line
	Check for missing or damaged cues on film
	Check for loose solder connections on interconnect board.