

## Monitor Troubleshooting guide:

If this monitor should not operate properly, first check the following guide to determine the cause. If, after checking the guide, operation is still not proper, contact your dealer or an authorized theatre equipment service person.

<b>Problem</b>	<b>Solution</b>
----------------	-----------------

Monitor does not Power-up	Check that power switch is on
	Check that power cord is plugged in at both ends
	Check for an open or missing fuse in input module
	Check for loose or missing wires
	Check that sound rack is powered

No Signal Indicated	Check for the input switches are set for the correct channel, amplifier, level, etc.
	Check that the selected input is providing a signal, is turned, on, and is at a proper level
	Check for loose or missing cables or connections to/from monitor
	Check for loose or missing cables inside monitor
	Check that monitor is turned on

No sound from the monitor speaker (But indicator shows signal)	Check that the monitor volume level is appropriately set
	Check for loose/missing wires to/from the monitor
	Check for loose/missing wires inside the monitor and speaker