



Replacement Instructions for Replacing Pay-Out Head Speed Control Tape on Target Puck

(Current version Big Sky Platter – 2005 to present. This version of the platter will have RED, GREEN ,YELLOW and “BLUE” LED indicators on the speed control modules.)

- 1) Remove old target clear cover and gradient tape.
- 2) Place PO head upside down on clean, flat surface, so target puck is up.
- 3) Apply new target tape as shown below, starting with the WHITE end, and applying counter-clockwise as shown below. Take care to keep the tape straight and parallel to puck edges. If tape is applied backwards, platter will operate erratically.
- 4) Apply new clear cover tape over target, trimming any excess, and having a minimum amount of overlap. The correct tape for the current version platters has a shiny, glossy finished surface, not a dull, matte finished surface.
- 5) Re-set PO arm position as shown on drawing on the attached page.
- 6) Test PO head on platter,

Gradient Tape for Pay-Out Head Speed Control

(Correct tape for the early version will have the letter “B” printed on it)

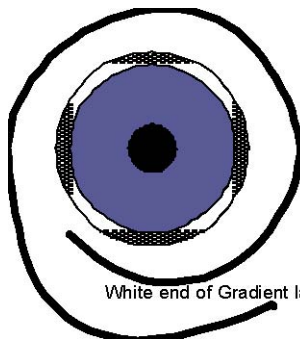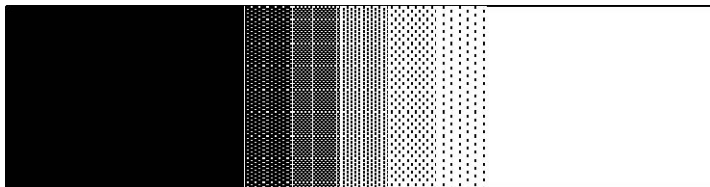

White end of Gradient label

Black end of Gradient label

Platter Pay-Out head Target Puck, viewed from bottom of Payout head assembly.