
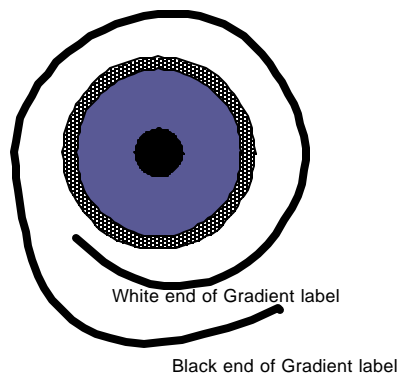


# Replacement Instructions for Replacing Pay-Out Head Speed Control Tape on Target Puck

1. Remove old target clear cover and gradient tape.
2. Place PO head upside down on clean, flat surface, so target puck is up.
3. Apply new target tape as shown below, starting with the WHITE end, and applying counter-clockwise as shown below. Take care to keep the tape straight and parallel to puck edges. If tape is applied backwards, platter will operate erratically.
4. Apply new clear cover over target, trimming any excess, and only having a minimum amount of overlap.
5. Re-set PO arm position as shown on drawing "PAYOUT HEAD ADJUSTMENT.MCD" which is part of the platter manual.
6. Test PO head on platter,.

Gradient Tape for Pay-Out Head Speed Control

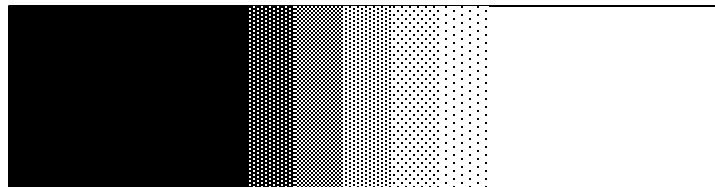

Platter Pay-Out head Target Puck, Viewed from bottom