


USE "SB2" TO SET LOCAL AUTOMATION ADDRESS AND CUE MODE.

IMPORTANT NOTE! WHILE SETTING UP SYSTEM, SET ALL DIP SWITCHES OFF SO THAT THERE ARE NO DUPLICATE ADDRESSES ON THE BUSS. SET ADDRESSES ONE AT A TIME AND CHECK STATUS PANELS AS SETTING THE ADDRESSES. DUPLICATE ADDRESSES WILL CAUSE IRRATIC BEHAVIOR.

SW. 1 is used to select between 2 cue modes. Sw. off = Random mode. - Sw. on = sequential mode.

Random mode allows the operator to use the same cues multiple times. The cue count resets after each cue.

Sequential mode counts individual cue tapes and increments the count to the next cue line until the Showend cue is activated. The cue count resets on showend for the next show.

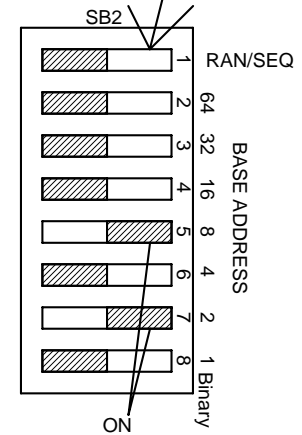

Shown above is the "SB2" switch bank which is used to select the local address of the automation.

The numbers above the switch bank indicate the binary representation of the corresponding switch.

Select in binary the value of the of the auditorium desired.

Shown is a representation of address #10 in binary. Select the value by turning on the switches and adding up the binary numbers represented by the switches.

2 + 8 = 10 (Auditorium #10)

BIG SKY INDUSTRIES INC.		
1475 PARK AVE. ALPHA N.J. 08865		
Title A-2000 F address switch settings		
Size A	Document Number REV-F base address settings.sch	Rev -
Date: Tuesday, August 22, 2006	Sheet 1	of 1